

Instruction of GDO-WWS01

Frequency: 433.92 MHz Rolling-Code

Battery: CR2032 3V

Working Temperature: -40°C - +50°C

- Keep wireless wall switch out of reach of children
- Wireless Wall switch may only be operated by persons who are familiar with the system and have been instructed in their function
- Use the wireless wall switch only when you are in sight of the door / gate
- Coding in wireless wall switch must always be carried out within the vicinity of the door operator. Use only original parts
- Protect wireless wall switch from rain, snow, sunlight or dust, otherwise the function of the wall switch may be impaired
- To change the battery, loosen the screws on the rear of the wireless wall switch

Programming

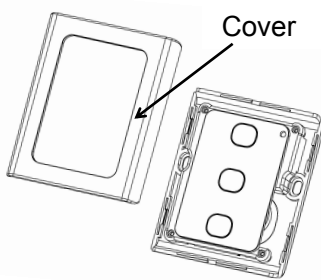


Figure 1

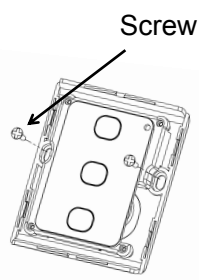


Figure 2

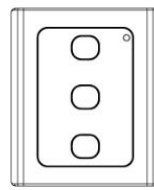


Figure 3

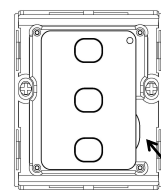


Figure 4

1. Open the cover of wireless wall switch (Fig.1)
2. Fix the wireless wall switch on the wall with 2 screws (Fig.2)
3. Close the cover of wireless wall switch (Fig.3)
4. You need to replace the battery, when the red light is dark or flash (Fig.4)

Coding instruction

- a) Press the "Code" key on the display of your garage door operator. A dot (.) will appear in the corner. (Fig.5)

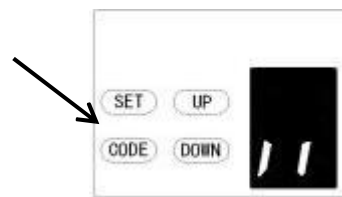


Figure 5

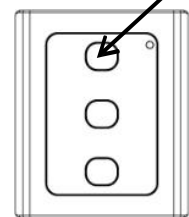


Figure 6

- b) Press one button of wireless wall switch, the dot (.) on the display turn off, then press the button again, the dot (.) on the display will flash, this means you have finished the coding.(Fig.6)

WARNING! When teaching in a wireless wall switch, the operator may be accidentally triggered initiating door movement!

Information about battery regulation

As a dealer for the distribution of electronic, battery-operated devices, we are obliged by law to inform our customers about the following:

Electrical and electronic devices, as well as batteries, must not be disposed of as household or residual waste, but must be delivered in the appropriate acceptance and collection points will.